
light + ventilation | long
installation instruction

1

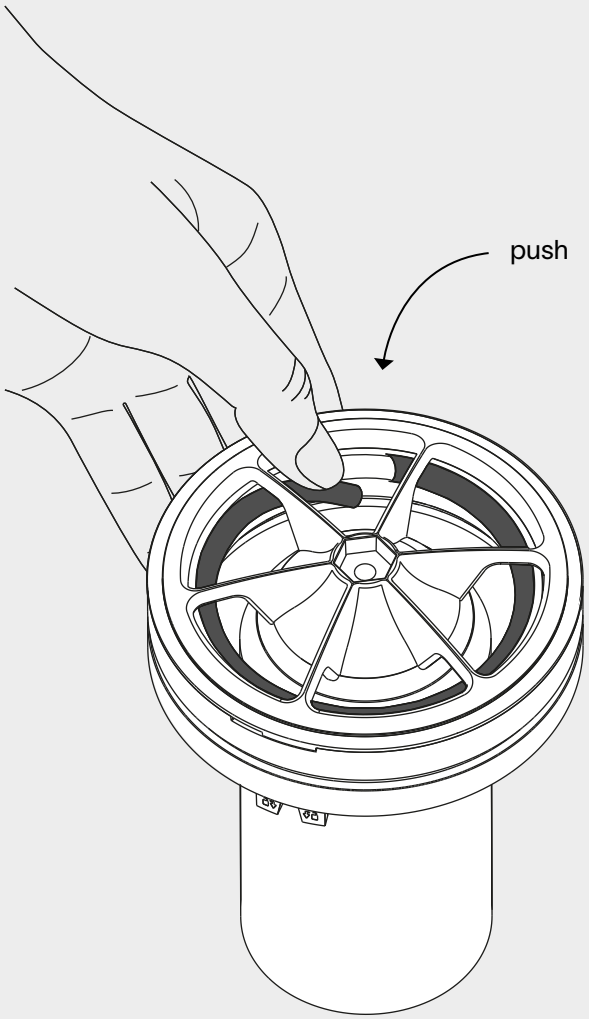


If 55m³/h is required
Remove the 25m³/h ring

If 25m³/h is required
Do not remove the 25m³/h ring

Remove the m³/h ring if necessary.


2

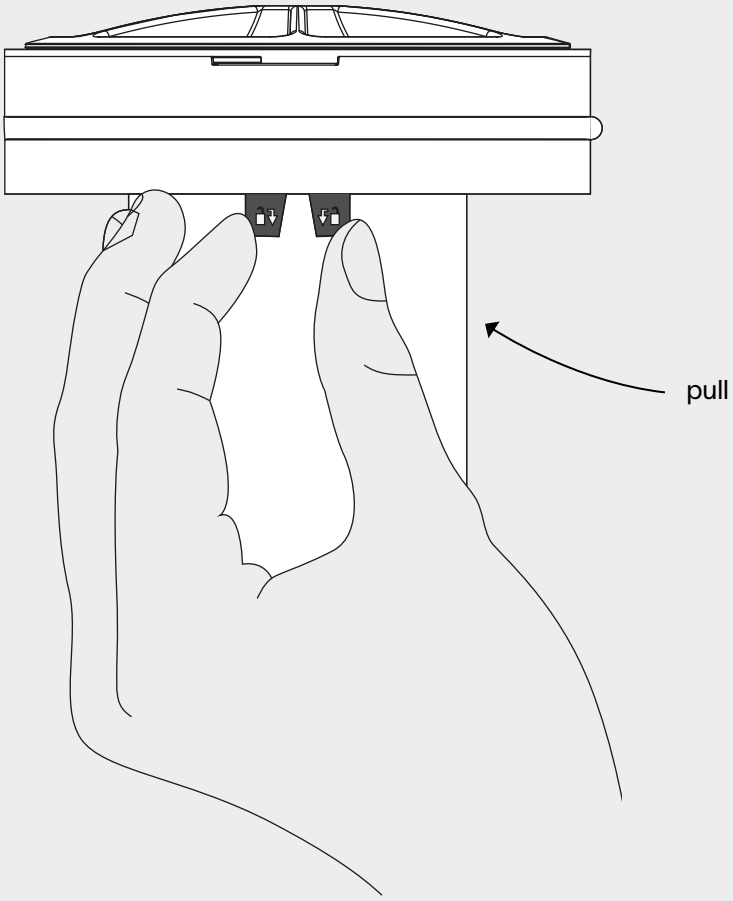



Gently pull the lock out before adjusting the air flow.


3

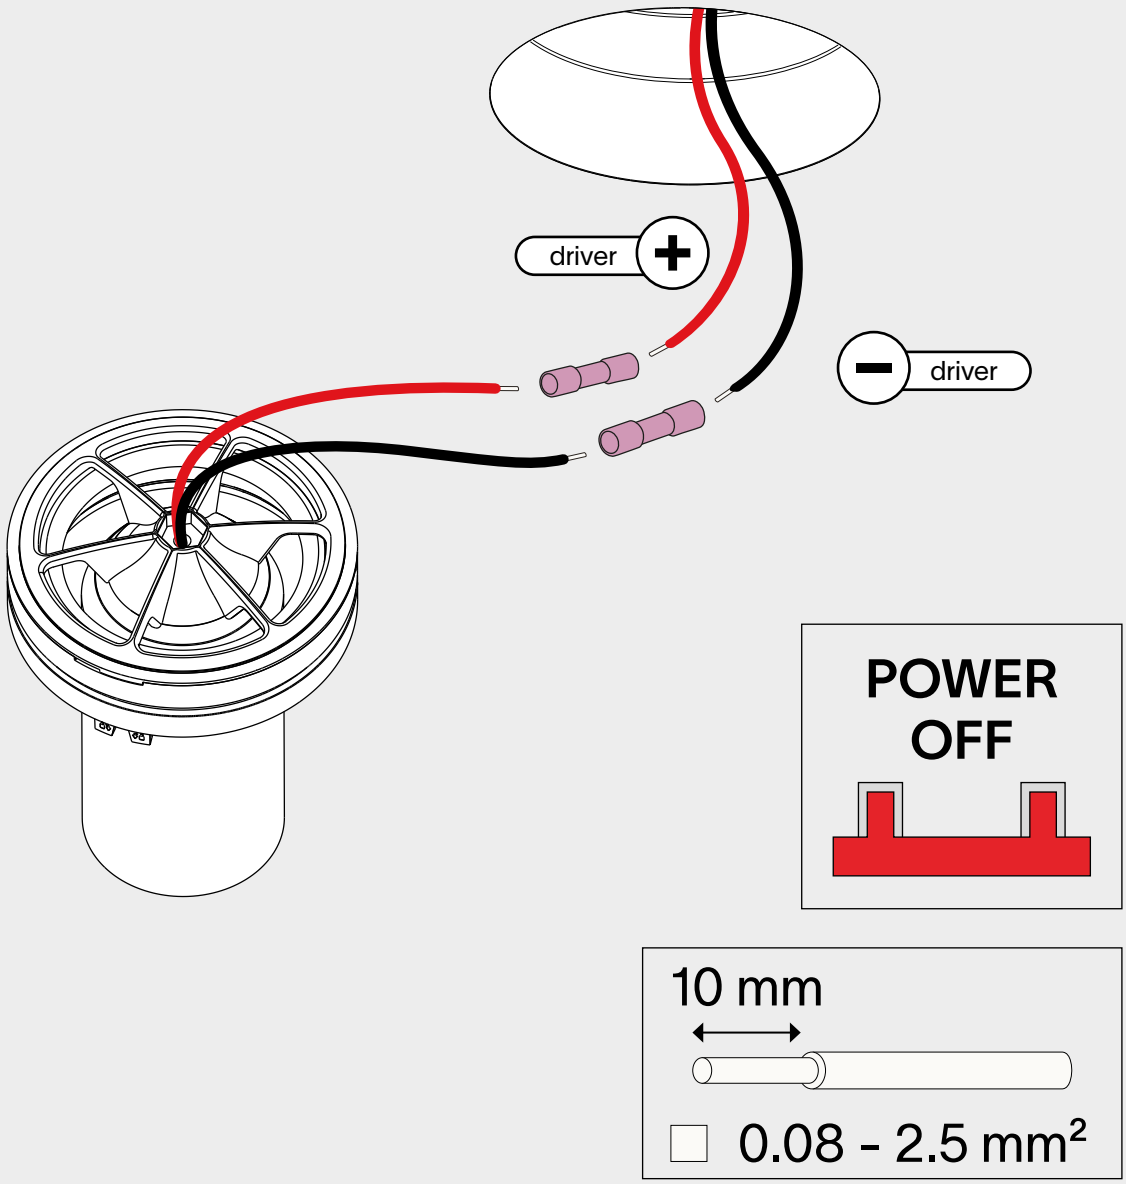


Connect the wires with waterproof connectors. For serial connection, respect polarity. Combine with a prado LED-driver.

constant current (mA)	typical forward voltage (V)	typical power (W)
350	16.9	5.9
500	17.4	8.7
700	18.2	12.7
850	18.5	15.7


4

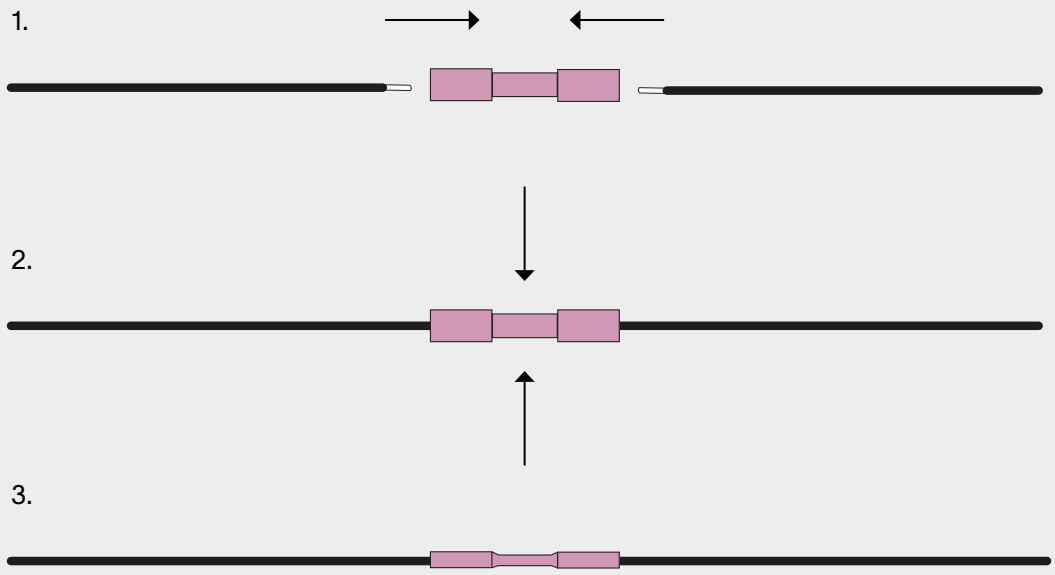

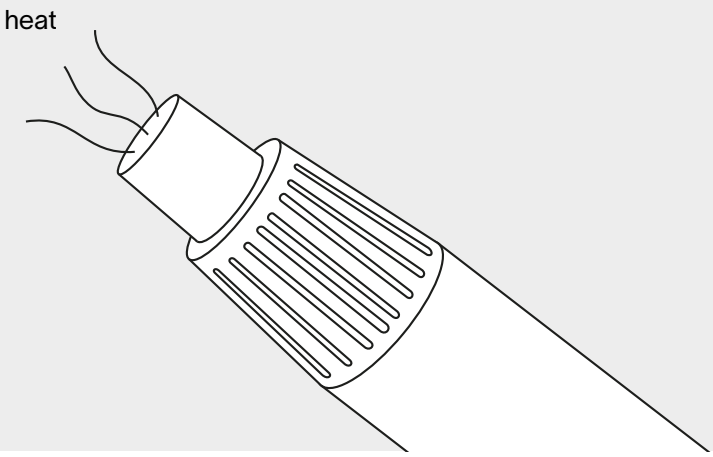


1. Insert the wires into the connector
2. Compress the middle part
3. Seal with a heater


5

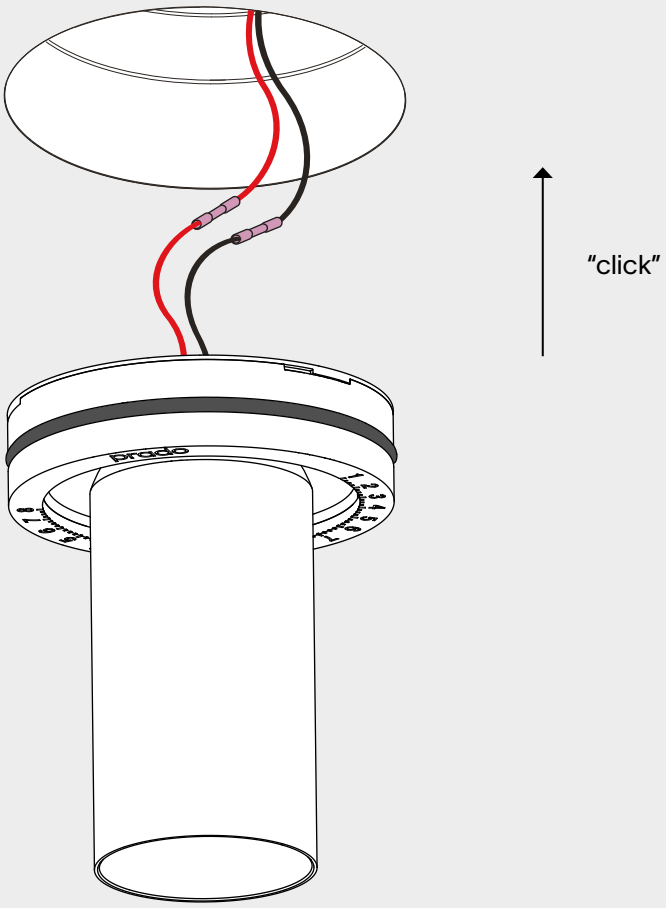


Gently insert the fixture into the kit until it “clicks”.

6

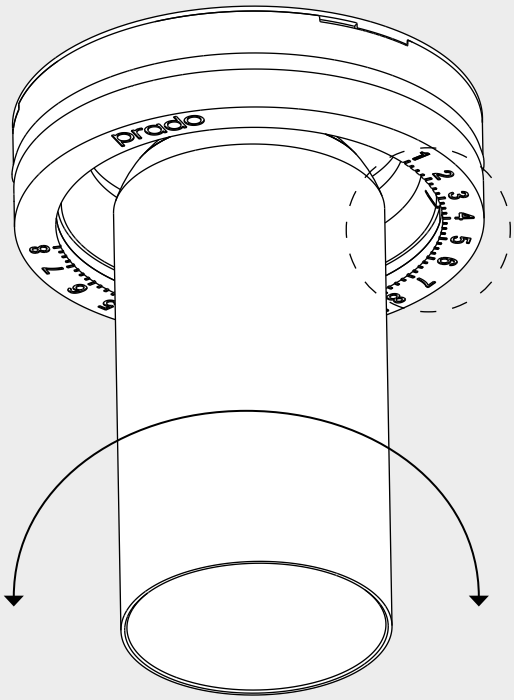




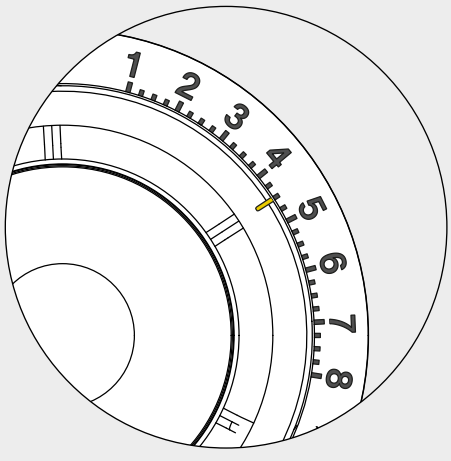


Twist the luminaire to adjust the ventilation flow level.


7

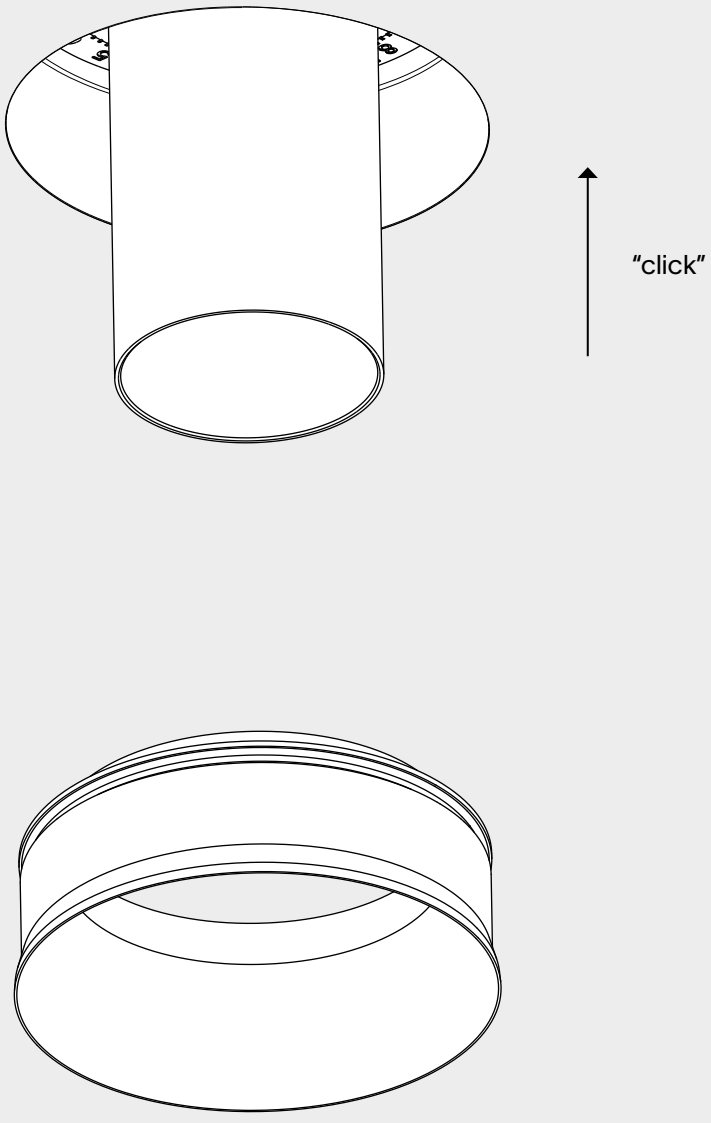

Insert the design ring to lock the ventilation valve.


8

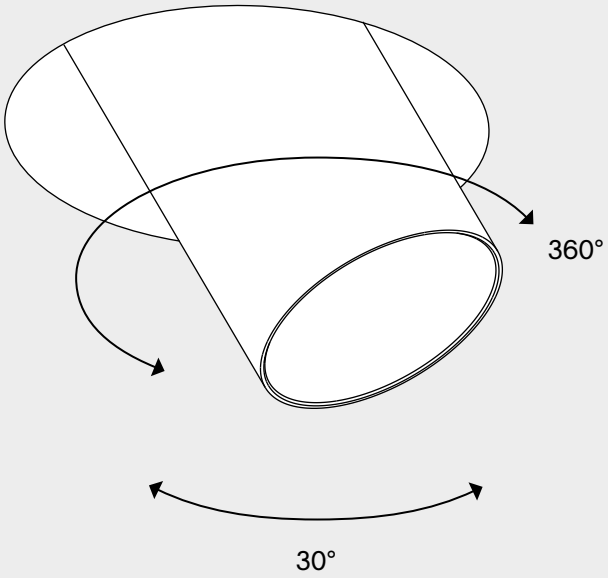


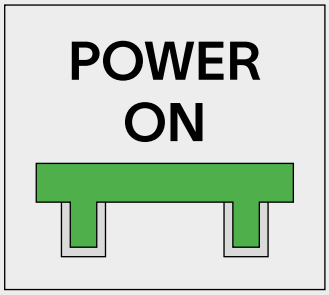

Twist the luminaire as desired.

thank you for choosing prado





Replace glass lense when broken.
Luminaire shall only be used together with glass lens.

prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.